

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.

## Valves, Electrically Operated Certified for Canada - Component


### COMPANY

#### Metal Work Spa

VIA SEGNI 5

CONCESIO, BS 25062 Italy

MH62144

Marking: Company name model designation, and the Recognized Component Mark for Canada 

Note: For additional marking information, refer to the [Guide Information Page](#).

**General-purpose valve**, Model(s): EB 80 may be followed by: S, may be followed by a number from 00 to 99 - may be followed by: E0, may be followed by a number from 00 to 99 or may be followed by two letters from AA to ZZ - may be followed by: P, may be followed by a number from 0 to 9, may be followed by a letter from A to Z or may be followed by a number from 0 to 9, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by: A4, may be followed by a number from 00 to 99, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by: B4, may be followed by 04 or 08, may be followed by a number from 0000 to 9999, may be followed by a number from 0 to 9, may be followed by: four letters from A to Z - may be followed by: M, may be followed by a number from 000 to 999, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by C1, C2 or C3 (Note: items after ':' may be repeated as many times as the number of modules used to compose the assembly).

**General-purpose valve, "Closed End Plate set"**, Model(s): 02282C , followed by 1, 2 or 3.

**General-purpose valve, "Compressed Air Supply module"**, Model(s): 02282P , followed by a number from 0 to 9, followed by 1 or X, followed by Z, followed by a number from 00 to 99.

**General-purpose valve, "EB 80"**, Model(s): EB 80 may be followed by: S, may be followed by a number from 00 to 99 - may be followed by: E0, may be followed by a number from 00 to 99 or may be followed by two letters from AA to ZZ - may be followed by: P, may be followed by a number from 0 to 9, may be followed by a letter from A to Z or may be followed by a number from 0 to 9, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by: A4, may be followed by a number from 00 to 99, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by: B3, may be followed by 03, 06, 13, 16, 23, 26, 33 or 36, may be followed by a number from 0000 to 9999, may be followed by a number from 0 to 9, may be followed by: three letters from A to Z - may be followed by: M, may be followed by a number from 000 to 999, may be followed by Z, may be followed by a number from 00 to 99 - may be followed by C1, C2 or C3 (Note: items after ':' may be repeated as many times as the number of modules used to compose the assembly).

**General-purpose valve, "Electrical Connection module"**, Model(s): 02282E0 , may be followed by a number from 00 to 99 or may be followed by two letters from AA to ZZ.

**General-purpose valve, "Intermediate Support"**, Model(s): 02282M , followed by a number from 000 to 999, followed by Z, followed by a number from 00 to 99.

**General-purpose valve, "Manifold (Sub-base)"**, Model(s): 02282B , followed by 3 or 4, followed by 03, 06, 13, 16, 23, 26, 33, 36, 04 or 08, followed by a number from 0000 to 9999.

**General-purpose valve, "Manifold Boxi 4 (Sub-base)"**, Model(s): 0228B , followed by G or U, followed by 1 or X, followed by a number from 0 to 9, followed by a letter from A to Z, followed by a number from 0000 to 9999, may be followed by a number

from 0 to 9, may be followed by four letters from AAAA to ZZZZ.

**General-purpose valve, "Manifold Boxi 6-8-12 (Sub-base)"**, Model(s): 0228B , followed by a number from 0000 to 9999, followed by a number from 0 to 9 or a letter from A to Z, followed by a letter from A to Z, followed by a number from 0 to 9 or a letter from A to Z, followed by a number from 00 to 99, followed by a number from 0 to 9 or a letter from A to Z, followed by a number from 000 to 999.

**General-purpose valve, "Pilot valve assembly (Solenoid Valve)"**, Model(s): 708203 , followed by G0, G1, I0, I1, J0, J1, K0, K1, L0, L1, N0, O0, O1, R0, R1, V0, V1, W0, W1, Y0, Y8, Z0 or Z1.

**General-purpose valve, "Proportional pressure regulator"**, Model(s): 02282A4 , followed by a number from 00 to 99, followed by Z, followed by a number from 00 to 99.

**General-purpose valve, "Signal Module"**, Model(s): 02282S , followed by a number from 00 to 99.

Last Updated on 2024-01-24

---

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL Solutions' Follow - Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL Solutions' Follow - Up Service. Always look for the Mark on the product.

UL Solutions permits the reproduction of the material contained in Product iQ subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from Product iQ with permission from UL Solutions" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "©2024 UL LLC."