



PROGRAMMABLE STEPPING MOTOR DRIVE - *e*.drive

PROGRAMMABLE STEPPING MOTOR DRIVE - e.drive

It can be used to control, easily and intuitively, electric cylinders that use a STEPPING motor with a rated current of up to 6A, two phases, with four, six or eight output wires. It connects up to a PC via a USB port and the user is provided with motion control configuration, programming and debugging environment, which allows you to create complex work cycles as it can handle both digital and analogue inputs and outputs, thanks to a user-friendly language (MW DRIVE) and a series of simple instructions and functions.

It consists of two electronic boards housed in a metal box that has been designed to be fixed onto a wall or to a DIN rail, using an accessory, and is equipped with removable screw connectors for wiring.

The electronic boards can control both the logic "motion control" stage and the power supply stage.


This independent system is ideal for use in stand-alone applications not requiring the use of any PLC.

The power stage consists of a ministepp bipolar chopper drive. It is characterised by a supply voltage of up to 55VDC for the power supply side and 24VDC for the logic side, compact dimensions and great flexibility of use.




| TECHNICAL DATA | | |
|--|-----|--|
| Code | | 37D1332002 |
| Motion control logic power supply | VDC | 24 |
| Drive power supply | VDC | 24 to 55 |
| Motor phase peak current | A | 1 to 6 |
| Temperature range | °C | -20 to 40 |
| Relative humidity (without condensation) | % | 5 to 85 |
| Bipolar motor inductance (1.8° angle) | mH | 1 to 12 |
| Dimensions | mm | 148 x 99 x 50.5 |
| Weight | g | 790 |
| Degree of protection | | IP20 |
| Communication interface | | Serial USB port for connection to PC |
| Configuration/programming/debug and diagnosis software | | MW DRIVE in Windows® environment |
| Dedicated signals | | Encoder input (A + B + Z), 5V line driver or 24V Push-Pull/Open collector |
| Digital inputs | | 14 |
| Digital outputs | | 7 |
| Analogue inputs | | 2, from 0 to 10V, freely programmable |
| Analogue outputs | | 1, from 0 to 10V |
| Controls available | | <ul style="list-style-type: none"> - Can be used with motors with a 1.8° base angle, 200 pulses/rev.; - Step Mode settable in various ways: Full Step, Half Step, 1/4, 1/8, 1/16 of step; - Integrated linear position transducer by connecting directly to the analogue output; - Automatic 60% reduction of the current supplied with motor stopped; - Possible dynamic regulation of the current supplied via cycle software instructions, for energy-saving purposes; - Home position search on limit switch, mechanical stop, encoder limit switch and zero mark, encoder mechanical stop and zero mark; - Positioning in relative or absolute mode; - Closed-loop motion control and step-loss control in the case of STEPPER motors with an encoder; - Integrated, automatic brake control via dedicated digital output in the case of motors with a brake; - Complementary and logical instructions for complex work cycles, such as: <ul style="list-style-type: none"> timings; variables control; test; analogue and digital I/O control |

CABLE USB

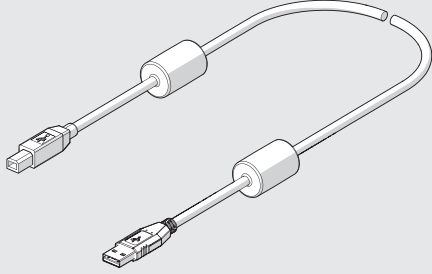

| Code | Description | Weight [g] |
|------------|--|------------|
| 37C0030000 | Cable for USB 2.0 male A-B connector with ferrite core, for connecting the e.motion / e.drive board to a PC, 3 m | 150 |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

CONNECTION SCHEME

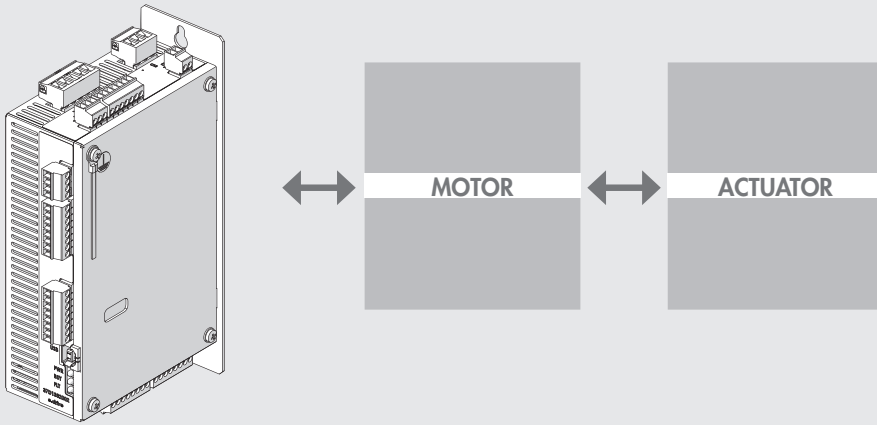

NOTES